
Project Type Instructions
UPC (For Reference Only) 0 57475 40202 0
Date: February 6 2020
Customer: Thermor ltd
Job Number: TH6584
Item Number: DT202
Designer: Alex Vranjesevic
PO: 2382100
Revision: A
Thermor
Contact: Graphic's Department
graphics@thermor-ins.com
Reason For Project:
New Item: **X**
New Branding:
Design Update:
N/A:
Artwork is not to be amended or scaled. If any changes are required please send through Thermor office with instructions, and we will amend here and resend artwork through. **PLEASE RETURN WITH SIGNATURE**
Colour Breakdown
K

BIOS
Professional

DT202
Commercial 4-in-1 Timer

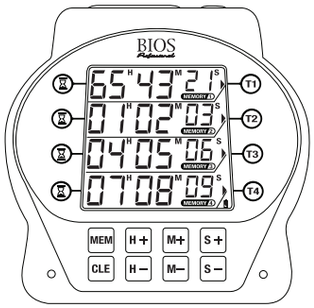

Thank you for purchasing the BIOS Professional Commercial 4-in-1 Timer. Please read the following instructions in their entirety before operating.

BUTTON DESCRIPTIONS:

[T1, T2, T3 & T4] Button:	Station Selection. Arrow appears on right of display next to last button pressed.
[H] Button:	Hours Setting
[M] Button:	Minutes Setting
[S] Button:	Seconds Setting
[+] Button:	Adds 1 digit to setting number (hour, minute or second) **NOTE: Hold button down for fast-up sequence**
[-] Button:	Subtracts 1 digit from station number (hour, minute or second) **NOTE: Hold button down for fast-down sequence**
[MEM] Memory Button:	Allows you to store and recall the same setting continuously
[Start/Stop] Button:	(On top of unit): Starts or stops station count-down/count-up
[CLE] Clear Button:	Allows you to clear the selected T1 or T2 or T3 or T4 timer setting

TIMER FUNCTIONS:

LCD Display:

Each station shows Hours, Minutes and Seconds with the corresponding [T Button] and colored LED with up to four (4) separate time cycles running at once. When the time cycle expires, the Timer will beep, the display will blink and the corresponding LED will flash, all at the same time.

LED BEEP/ALARM:

Flashing LED and a high pitched beeping sound will start automatically at any station when the count-down finishes and count-up starts. Each station has its own distinct sound. Volume is adjustable by turning the volume knob on the backside of the unit.

- Station T1: Red LED: 1 Beep
- Station T2: Yellow LED: 2 Beeps
- Station T3: Green LED: 3 Beeps
- Station T4: Blue LED: 4 Beeps

NOTE: When multiple stations are set, they cannot be started at the same time. Each station has to be started individually. This timer can go as loud as 95 db when the volume knob is turned all the way to the right.

COUNT DOWN/UP FUNCTION:

Count-Up starts automatically at any station when the count-down finishes. LED flashes and the alarm sounds. Displays elapsed time from when Alarm was zero. Each station has a maximum count-down/up of 99 hours, 59 minutes and 59 seconds.

BLUE BACKLIGHT:

The blue backlight automatically comes on when someone presses any button to program the timer and will stay on for 15 seconds after no buttons are pressed.

SETTING UP YOUR TIMER:

Batteries:

- Remove the compartment door on the back of the timer and insert 4 (non-rechargeable) AA batteries.

NOTE: Make sure these are inserted correctly according to the polarity as to not harm the unit. Remove all batteries when the timer is not in use for long periods of time. BATTERIES MUST BE REMOVED BEFORE USING THIS TIMER WITH AN ADAPTER. (Adapter, model DT203, sold separately).

- When the batteries are low, the low battery indicator will be displayed and an alarm will go off for 30 seconds. This means it's time to replace the batteries.

Project Type
Instructions

UPC (For Reference Only)
0 57475 40202 0

Date: February 6 2020
Customer: Thermor ltd
Job Number: TH6584
Item Number: DT202
Designer: Alex Vranjesevic

PO: 2382100
Revision: A

Thermor
Contact: Graphic's Department
graphics@thermor-ins.com

Reason For Project:
New Item: **X**
New Branding:
Design Update:
N/A:

Artwork is not to be amended or scaled. If any changes are required please send through Thermor office with instructions, and we will amend here and resend artwork through. **PLEASE RETURN WITH SIGNATURE**

Colour Breakdown
K

SETTING TIMERS:

- Push [T1, T2, T3 or T4] button, depending on which one you would like to set.
- To set the time period (Hours, Minutes or Seconds), push [+] or [-] button to the number required.
- Select which timer you would like to start by pressing [T1, T2, T3 or T4] button.
- Next, push [Start/Stop] button to start the count down. Push the [Start/Stop] button to stop the timer.

NOTE: When multiple stations are set, they cannot be started at the same time. Each station has to be started individually.

MEMORY MODE:

This function allows you to store and recall a prior time setting from memory.
NOTE: Initial display is the factory setting and displays as 2, 5, 10, and 15 minutes. If you wish to save these settings, select the corresponding [T1, T2, T3 or T4] button and then select [MEM] button.

TO SET MEMORY:

- After setting the time with [+] or [–] button, press the Memory [MEM] button. The time will be stored and a memory indicator will appear on the display.

TO RECALL MEMORY:

- After stopping the alarm/count-down press the [Start/Stop] button and then press the Memory [MEM] Button. The Memory value will be recalled (a memory indicator will appear on the display).
- The memory can be adjusted at this point by hitting the [+] or [–] button. The Memory indicator stays on and the last time displayed is the time stored when the [Mem] indicator is on.

NOTE: The timer automatically exits Memory Mode when it starts counting down, but the value remains stored.

MAINTENANCE:

- To clean your timer, wipe it down with a damp cloth only. Do not submerge in water.
- Remove batteries if timer is not being used for an extended period of time.
- Do not use batteries and adapter together as this could damage the unit.

ONE YEAR WARRANTY

The Commercial 4-in-1 Timer has a 1 year warranty to be free of manufacturing defects in materials and workmanship under normal applications for 1 year of the original owner. If this product becomes inoperable due to defect and requires repair, return the product with all component pieces and proof of purchase to the address listed below. This warranty does not cover any shipping/transport costs. This warranty does not apply if the product is subject to misuse, neglect, rough handling or damage.

Ship the unit prepaid and insured (at owners option) to:
Thermor Ltd.
Attn: Repair Department
16975 Leslie Street
Newmarket, ON L3Y 9A1

www.biosprofessional.com
Email: thermor@thermor-ins.com

MANUFACTURED BY/FABRIQUÉ PAR :
THERMOR LTD.
16975 LESLIE STREET
NEWMARKET, ON L3Y 9A1
MADE IN CHINA/FABRIQUÉ EN CHINE